


## Vnútorý závit

## Prevedenie 2


∅d	20	22	25	28	32	36	40	45	50	55	63	70
m	14x1,5	16x1,5	18x1,5 20x1,5	20x1,5	24x1,5	24x1,5 27x2	27x2	27x2 30x2	30x2 36x2	36x2 42x2	42x2	42x2 52x2
a	12	12	15	17	17	20	20	20	25	25	30	30
b <sub>max</sub>	40	40	56	56	60	70	70	70	80	90	90	100
s	18	19	22	24	28	30	36	38	41	46	55	60
Sa	8	8	10	12	12	15	15	15	18	18	20	20

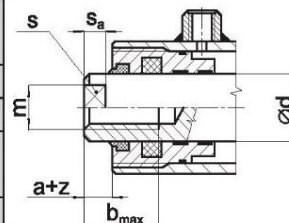

## Vonkajší závit

## Prevedenie 3



∅d	18	20	22	25	28	32	36	40	45	50	55	63	70
m	16x1,5	16x1,5 18x1,5	16x1,5 18x1,5	18x1,5 20x1,5	20x1,5 22x1,5	24x1,5	24x1,5 27x2	27x2	27x2 30x2	30x2 36x2	36x2 42x2	42x2	42x2 52x2
a	12	12	12	15	17	17	20	20	20	25	25	30	30
b	20	20 30	20 30	30	30 34	34 40	40	40	40 45	45 50	50	60	60
s	16	18	19	22	24	30	32	36	41	46	50	60	65
Sa	8	8	8	10	12	12	15	15	15	18	18	20	20

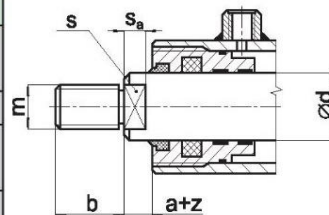

## Otvor pre čap

## Prevedenie 4

∅d	18	20	22	25	28	32	36	40	45	50	55	63	70
∅d <sub>1</sub>	10	12	12	14	15	17	20	22	26	28	30	40	50
a	6	6	8	8	8	10	10	12	12	15	15	18	18
b	25	30	35	40	45	50	60	70	80	95	100	120	135
c	15	18	22	25	29	31	36	43	50	59	64	80	85
e	13	15	16	18	20	24	26	28	32	34	38	40	46

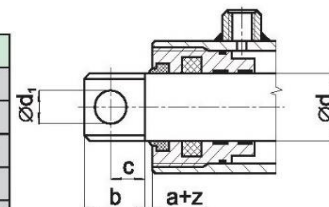

Zvýraznené rozmery sú prednostné

## Kontaktné informácie

Hydraulik s.r.o, Priemyselna 2977, Bardejov 085 01, email: hydraulik@hydraulik.sk, Mob: +421 905 178 728, +421 905 341 240

